

Universal Telescopic 4 Door System

FITTING INSRUCTIONS - NOTICE DE POSE - MONTAGE HANDLEIDING - MONTAGEANLEITUNG

ISTRUZIONI DI MONTAGGIO - INSTUCCIONES DE MONTAJE

System Specification

Maximum Door Width = 1200mm

Minimum Door Width = 500mm

Husky Door Range = 32 to 47mm

Soltaire Door range = 35 to 47mm

Maximum Husky Panel Weight = 80kg

Maximum Soltaire Panel Weight = 120kg

Contents of Kit



2 x Short Arm



4 x Belt joint



4 x Belt retain



10 x Belt clamp



 
2 x Long arm




2 x Fixed floor guide



2 x Adjustable floor guide



2 x Adjustable floor guide bracket

 

2 x Datum Block





Toothed belt (Metres)

2 x Universal tension block


x 16 m

	UTEL/4
M6 x 12 CSK HD	10
10G x 30 Woodscrews	26
M4 x 6 Grubscrew	2
M6 x 10 Hex HD Bolt	8


PLEASE NOTE


These instructions are to be read in conjunction with instructions specific to your chosen system.


Remember to install track stops into track; these are used to limit the travel of the doors.

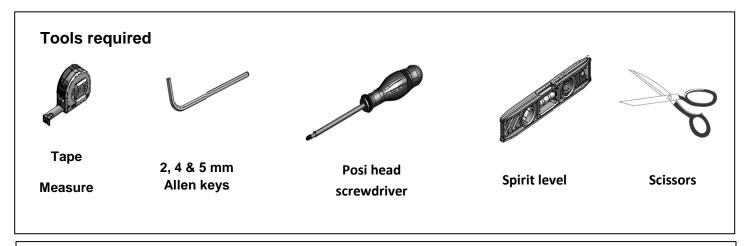


System overview & track installation

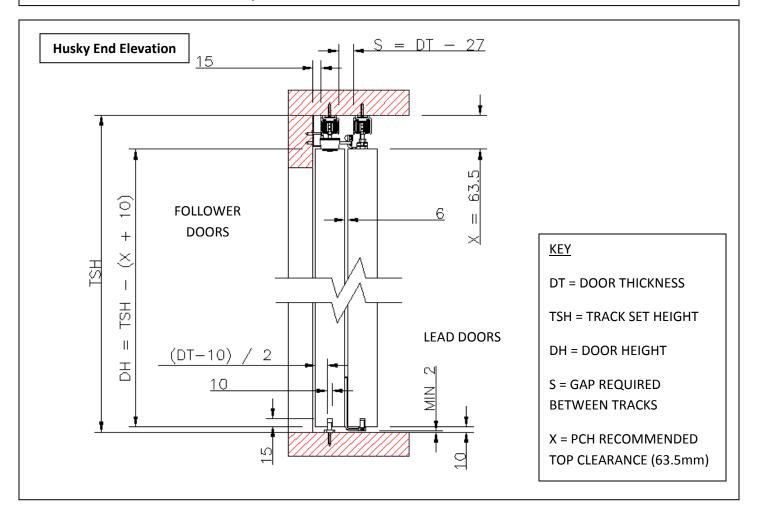


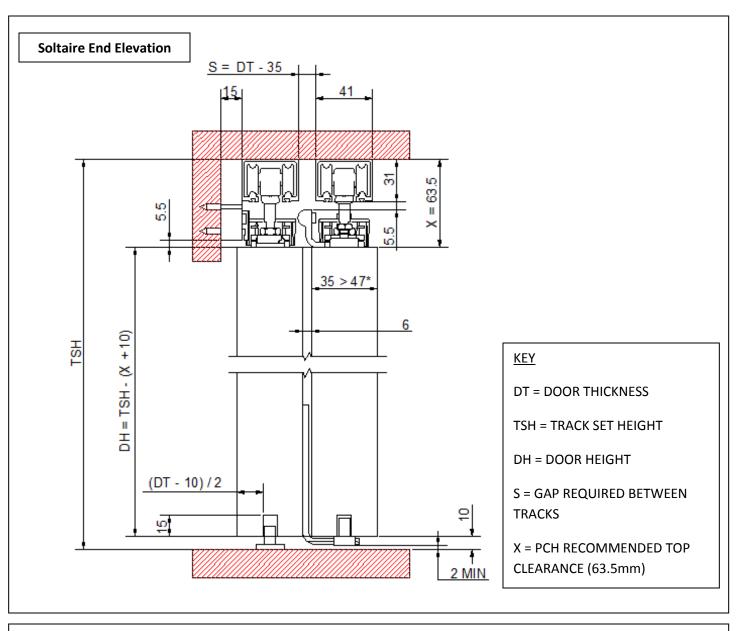

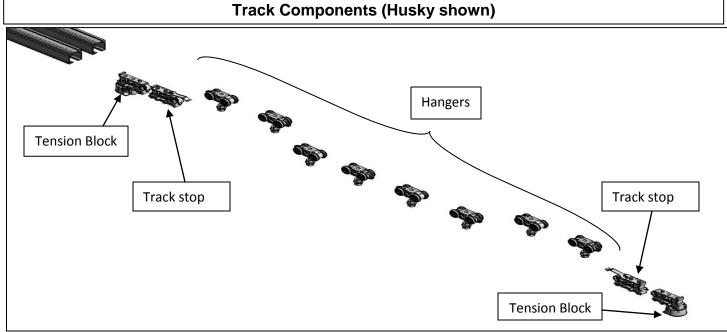

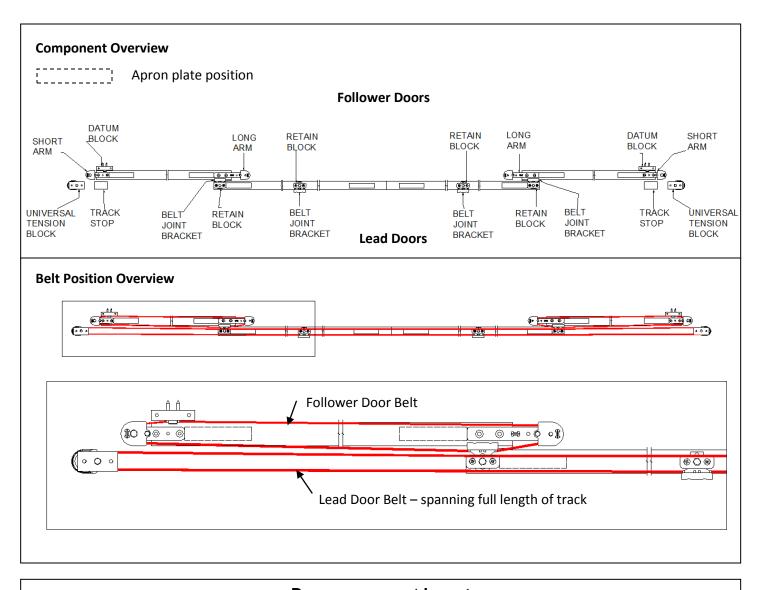

Door component layout

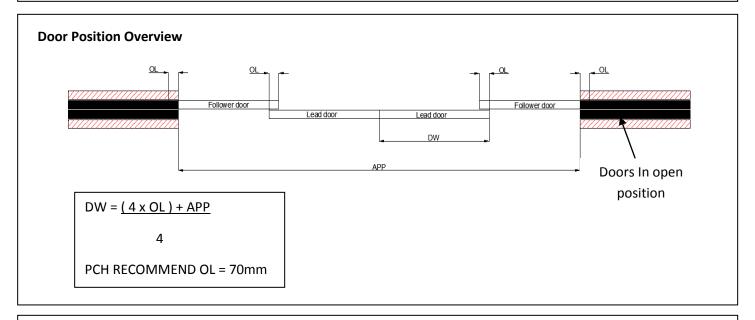


KEY

DW = DOOR WIDTH


APP = MAXIMUM CLEAR OPENING WIDTH

OL = OVERLAP OF DOORS (RECOMMENDED 70mm)


Door Floor guide routing detail

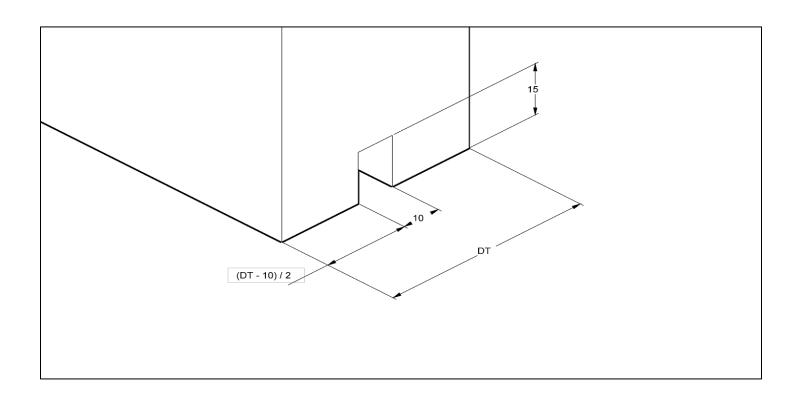


1. Attach Short arm on follower door

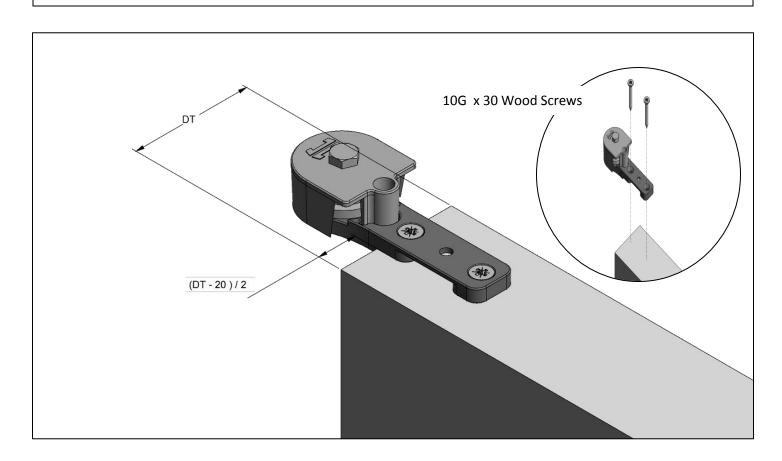


2. Attach Long arm on following doors

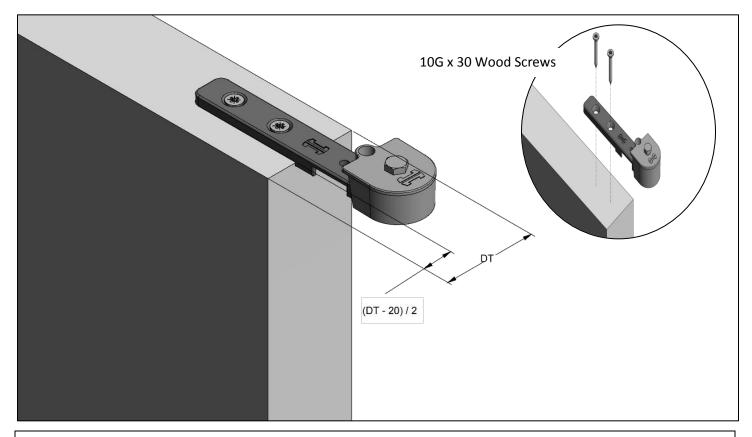


3. Remove bearing caps on follower doors

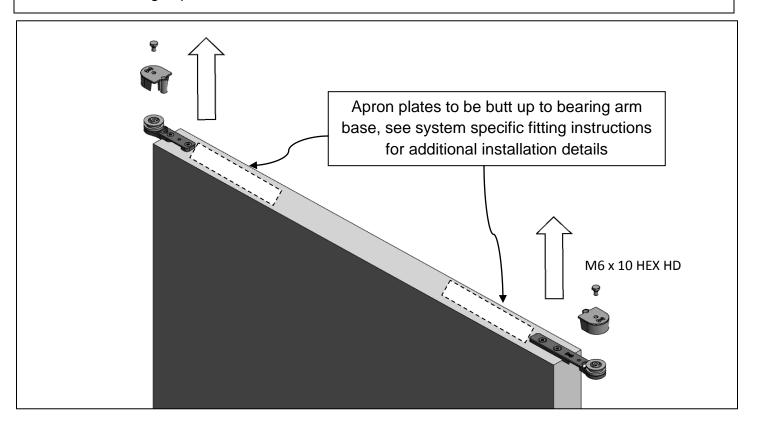


4. Loop belt around bearing wheels & cut belt to length – on follower doors

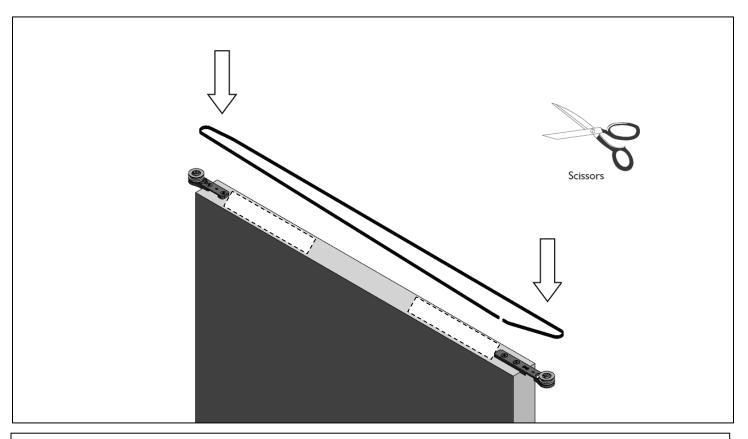


5. Attach both ends to belt joint bracket – on follower doors

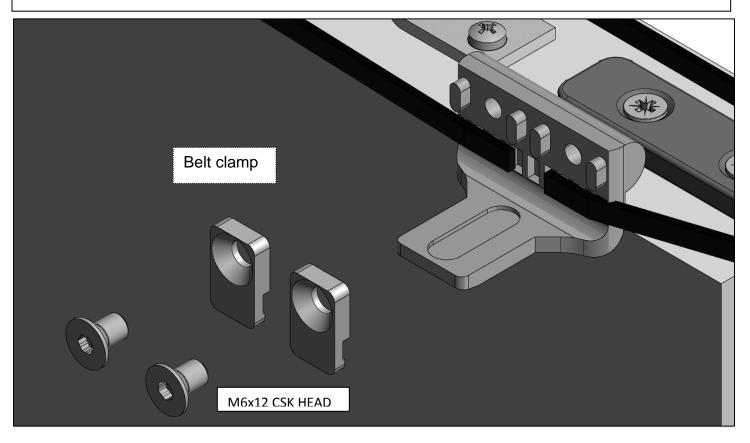


6. Clamp bracket should be free to traverse between bearings – on follower doors

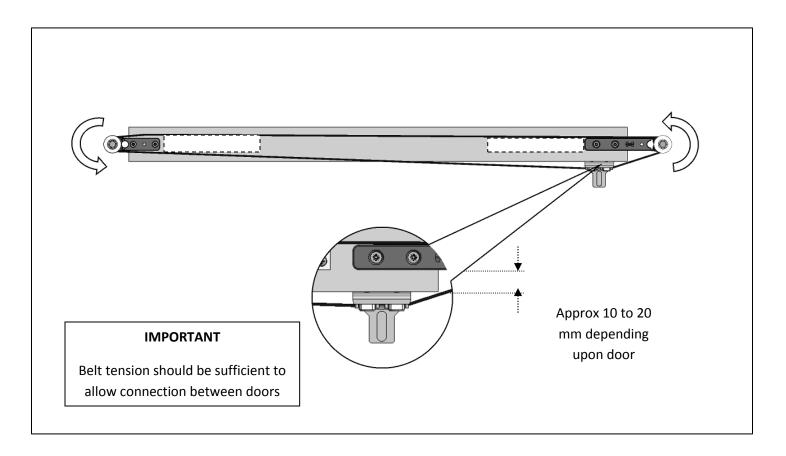


7. Re attach bearing caps

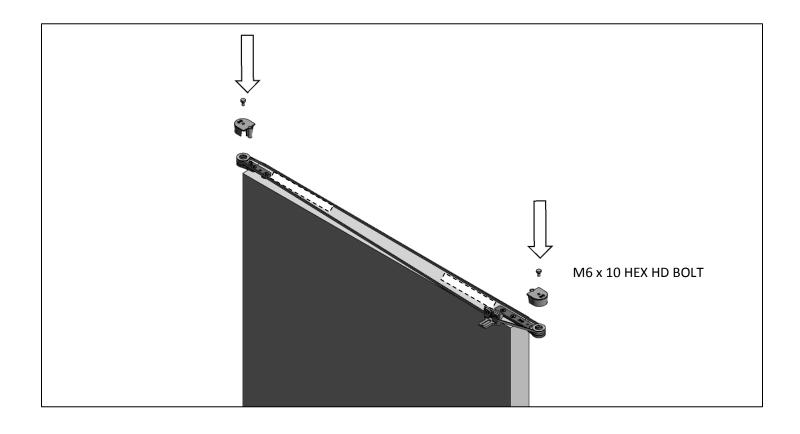


8. Position retain block on lead doors (LH lead door shown only)

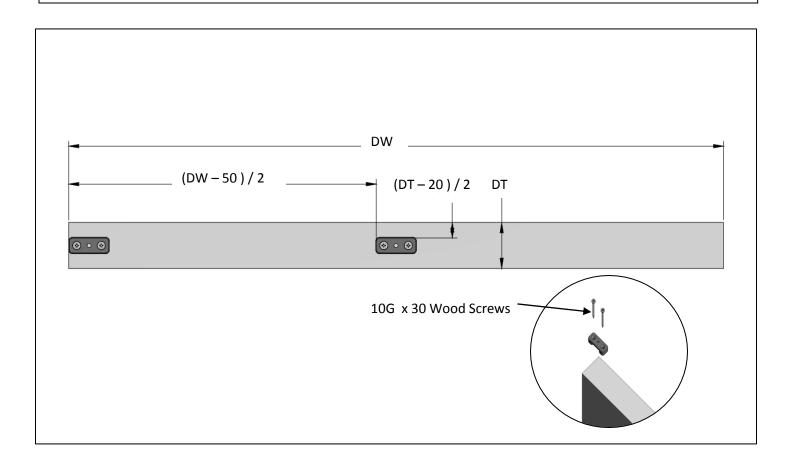

9. Floor guide overview

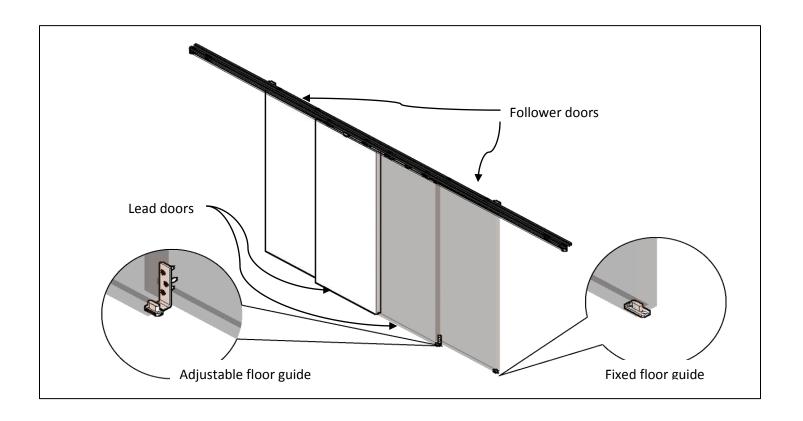


10. Position adjustable floor guide on face of follower door (LH door shown only)

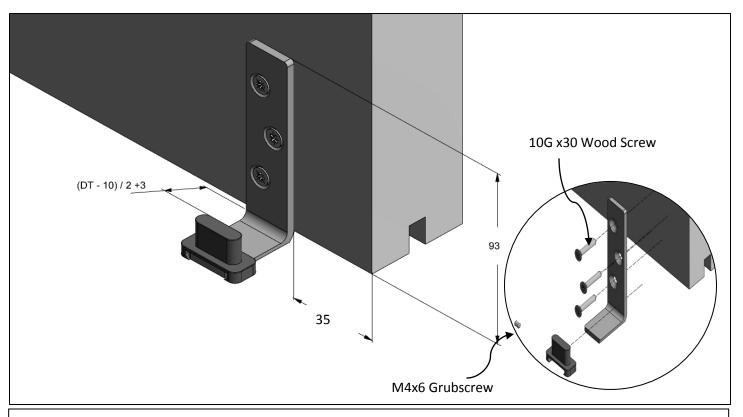


11. Hang Doors, Follow fitting instructions specific to your hanger


12. Ensure floor guide correctly aligned

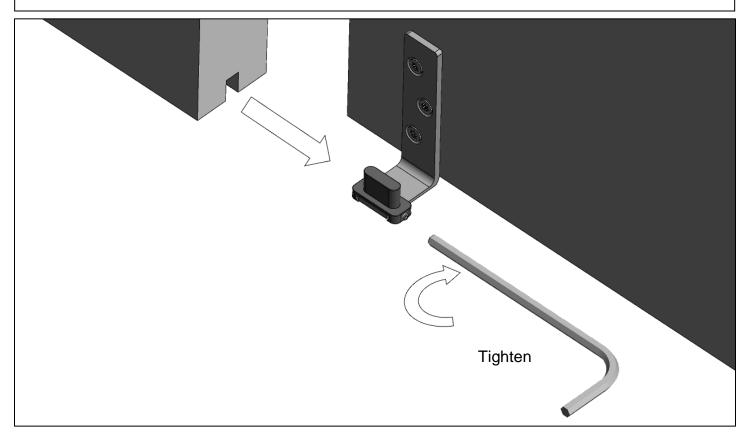


13. Align doors with spirit level & position fixed floor guides

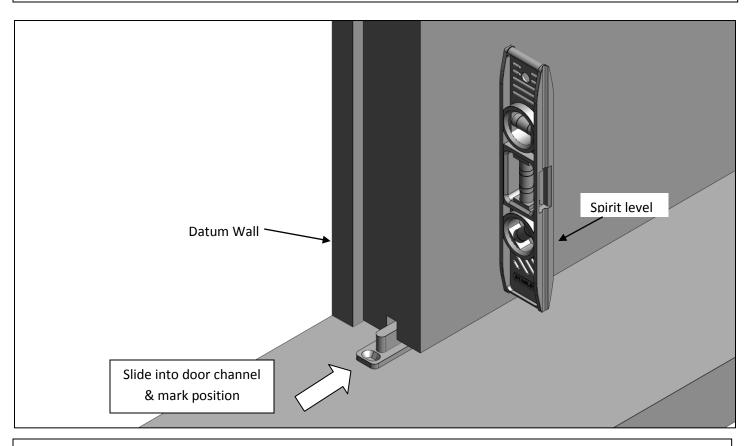


- 14a. Remove bearing cap from tension wheel assembly
- 14b. Loop belt around bearing wheels

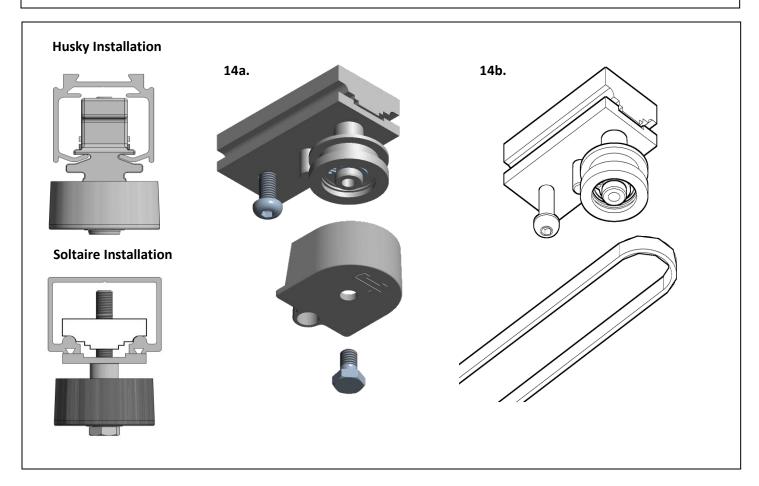


15. Re attach the bearing cover and apply tension to belt

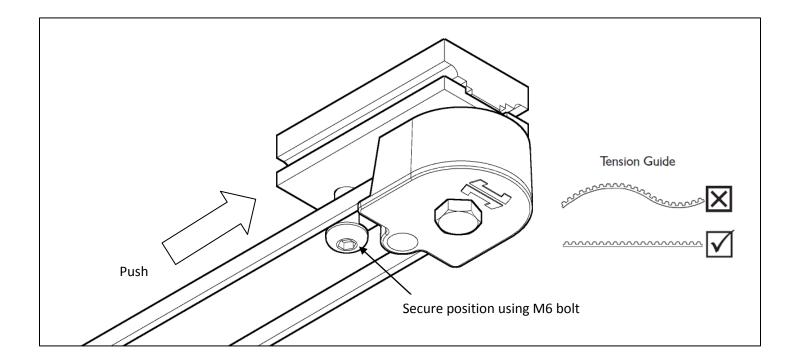


16. With Doors in Closed Position – Connect Follower Door to Lead Door

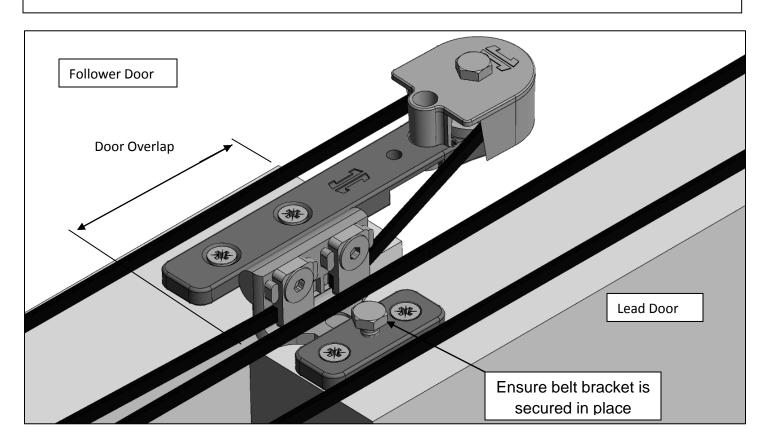


17. Door belt overview - Plan View

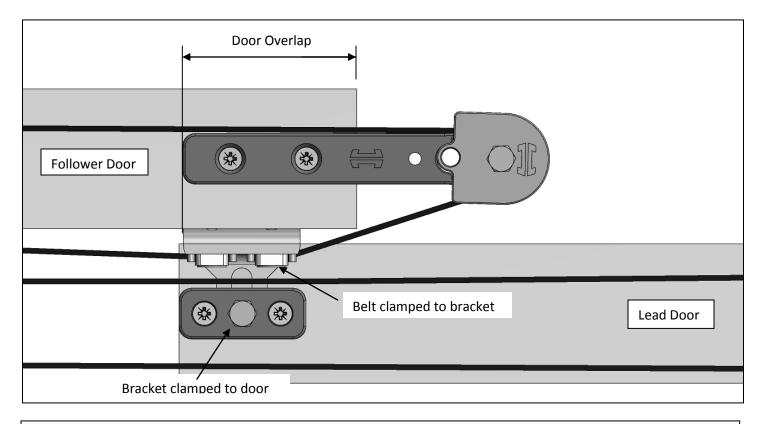


18. Connect Lead Door to Belt

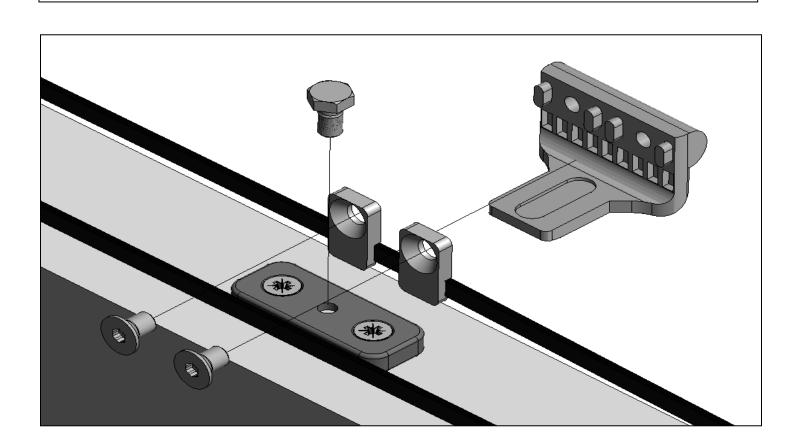

19. With doors fully closed mark position for datum block

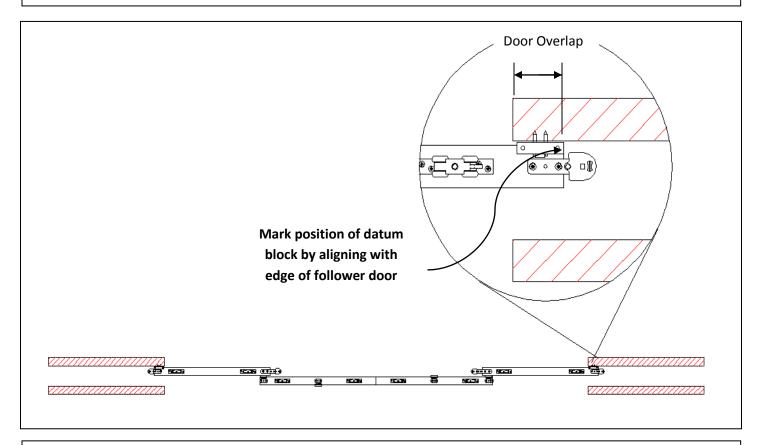

20. Affix datum block – ensuring doors are able to fully traverse the track

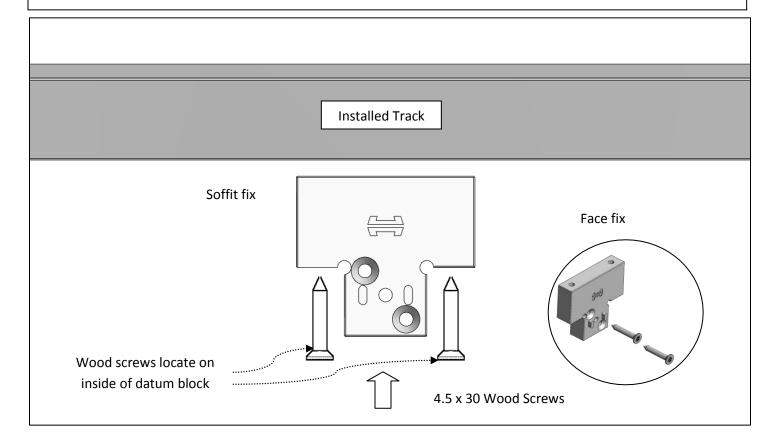

21. Connect belt to datum block

